


Spare parts list

Handheld pneumatic pick hammers

	Valid from serial number
TEX 10PS	001751
TEX 10PS KL	001961
TEX 10PS R	001245

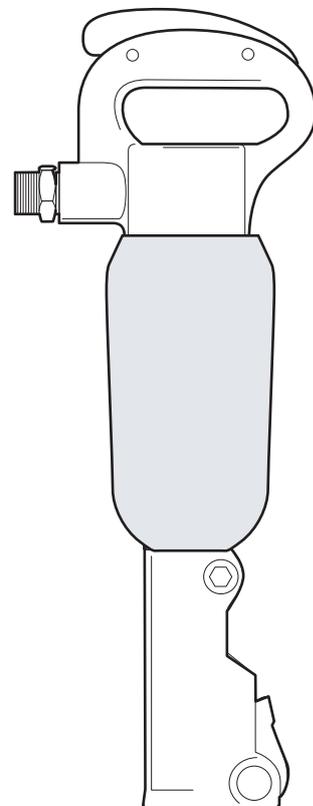

Contents

General information	5
Spare parts list	6
TEX 10PS	6
TEX 10PSR	8
TEX 10PSKL	10
Insertion tools	12
ISO standard hexagon 22 x 82.5 mm (7/8 x 3¼ in.)	12
Round 25 x 75 mm (1 x 3 in.)	12
Round 1 x 3 in. (25 x 75 mm)	12
Accessories	13
Pre-mounted rubber hose with couplings	13
Water separator	13
Lubricator	13
Breaker and hammer AIR-OIL	13
Claw couplings	14

General information

This spare parts list applies to the following:

Description

Handheld pneumatic pick hammer TEX 10PS

Handheld pneumatic pick hammer TEX 10PS KL

Handheld pneumatic pick hammer TEX 10PS R

Use only authorized parts. Any damage or malfunction caused by the use of unauthorized parts is not covered by Warranty or Product Liability. Any unauthorized use or copying of the contents or any part thereof is prohibited. This applies in particular to trademarks, model denominations, part numbers, and drawings.

Instructions for use


This spare parts list contains no safety regulations and is merely intended to assist in the ordering of spare parts.

For information about operating, servicing, or repairing, the relevant Safety and operating instructions must be consulted at all costs.

Please observe the safety instructions listed in the relevant Safety and operating instructions!


Spare parts list

TEX 10PS

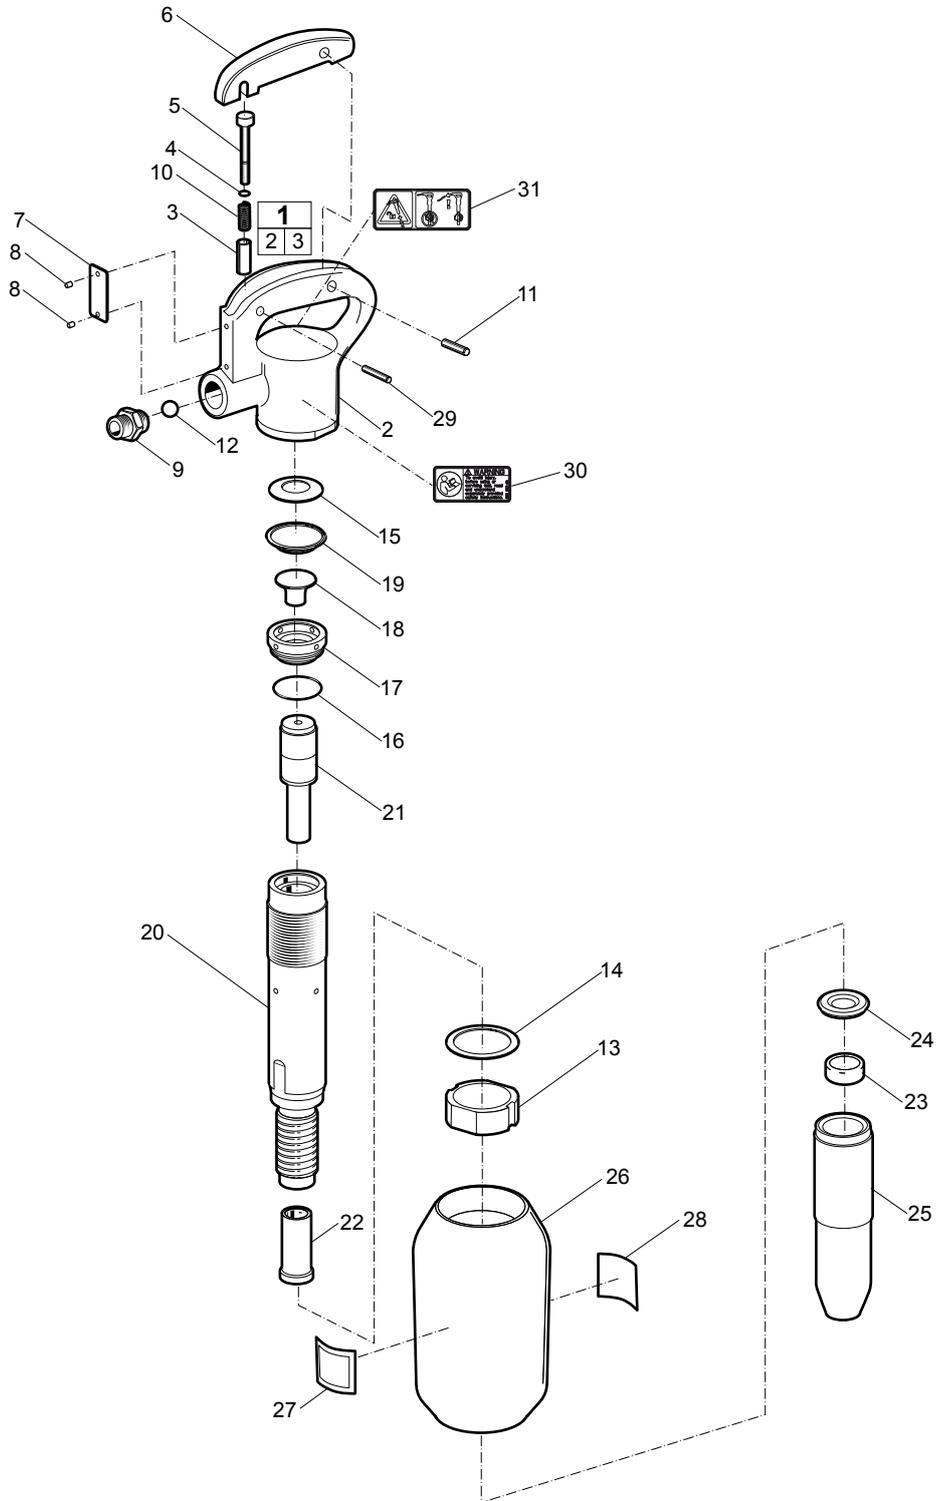


No.	Description	Remark	Quantity	Part number
1(2-3)	Handle, complete		1	3362 2600 13
2	Handle		1	-
3	Bushing		1	3360 3126 61
4	O-ring	5 x 1.5 mm 70 SHORE 0.20 x 0.06 in.	1	0663 9136 00
5	Valve stem		1	3360 1644 85
6	Trigger		1	3360 1644 86
7	Data plate		1	-
8	Screw		2	0244 4144 00
9	Nipple		1	9000 0343 00
10	Spring		1	3310 1379 00
11	Spring pin	8 x 28 mm DIN 1481	1	0108 1357 00
12	Ball		1	3310 1380 00
13	Nut		1	3361 8546 10
14	Lock washer		1	3362 2644 44
15	Disc spring		1	0384 3437 00
16	O-ring	47.3 x 2.62 mm 1.86 x 0.10 in.	1	0663 2101 55
17	Valve housing		1	3360 9913 22
18	Main valve		1	3360 1646 84
19	Cover		1	3362 2600 10
20	Cylinder		1	3362 2600 06
21	Piston		1	3360 9231 04
22	Tool chuck	Hexagonal 22 x 82.5 mm 7/8 x 3 1/4 in.	1	3360 1644 80
23	Buffer		1	3360 1645 46
24	Stop ring		1	3362 2643 92
25	Cap		1	3360 1871 85
26	Silencer		1	3310 1345 00
27	Label	"Atlas Copco"	1	0690 1356 00
28	Sound power label		1	-
29	Spring pin	5 x 24 mm DIN 1481	1	0108 1298 00
30	Safety label	Read instruction manual	1	3310 1602 00
31	Eject warning label		1	3310 1572 00

TEX 10PSR

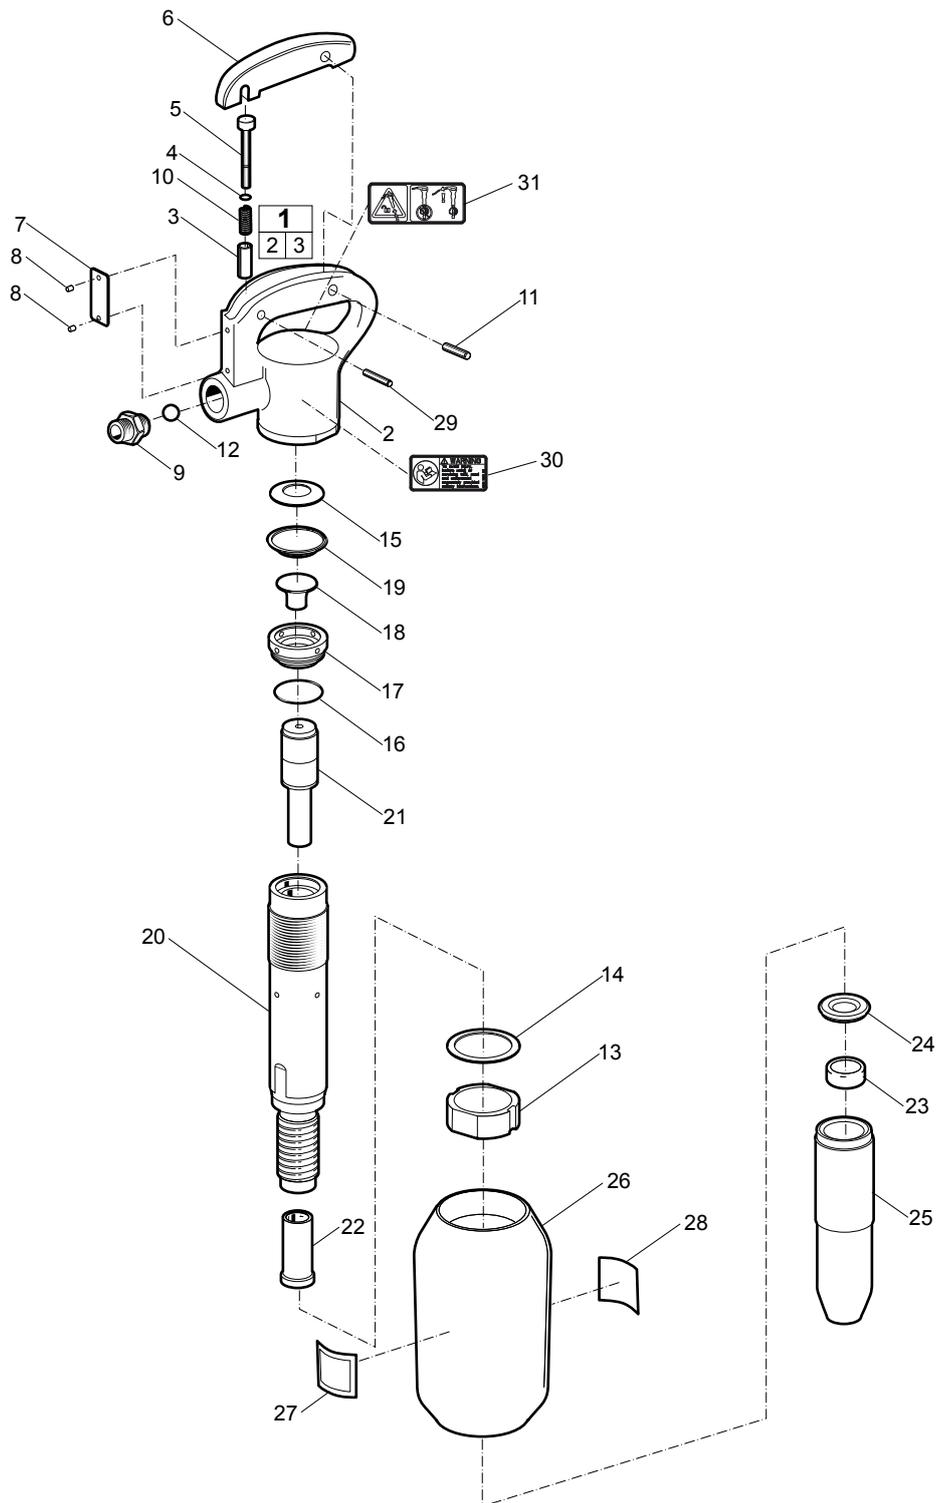

No.	Description	Remark	Quantity	Part number
1(2-3)	Handle, complete		1	3362 2600 13
2	Handle		1	-
3	Bushing		1	3360 3126 61
4	O-ring	5 x 1.5 mm 70 SHORE 0.20 x 0.06 in.	1	0663 9136 00
5	Valve stem		1	3360 1644 85
6	Trigger		1	3360 1644 86
7	Data plate		1	-
8	Screw		2	0244 4144 00
9	Nipple		1	9000 0343 00
10	Spring		1	3310 1379 00
11	Spring pin	8 x 28 mm DIN 1481	1	0108 1357 00
12	Ball		1	3310 1380 00
13	Nut		1	3361 8546 10
14	Lock washer		1	3362 2644 44
15	Disc spring		1	0384 3437 00
16	O-ring	47.3 x 2.62 mm 1.86 x 0.10 in.	1	0663 2101 55
17	Valve housing		1	3360 9913 22
18	Main valve		1	3360 1646 84
19	Cover		1	3362 2600 10
20	Cylinder		1	3362 2600 06
21	Piston		1	3360 9231 04
22	Tool chuck	Round 25 x 75 mm 1 x 3 in.	1	3360 1644 91
23	Buffer		1	3360 1645 46
24	Stop ring		1	3362 2643 92
25	Cap		1	3360 1871 85
26	Silencer		1	3310 1345 00
27	Label	"Atlas Copco"	1	0690 1356 00
28	Sound power label		1	-
29	Spring pin	5 x 24 mm DIN 1481	1	0108 1298 00
30	Safety label	Read instruction manual	1	3310 1602 00
31	Eject warning label		1	3310 1572 00

TEX 10PSKL

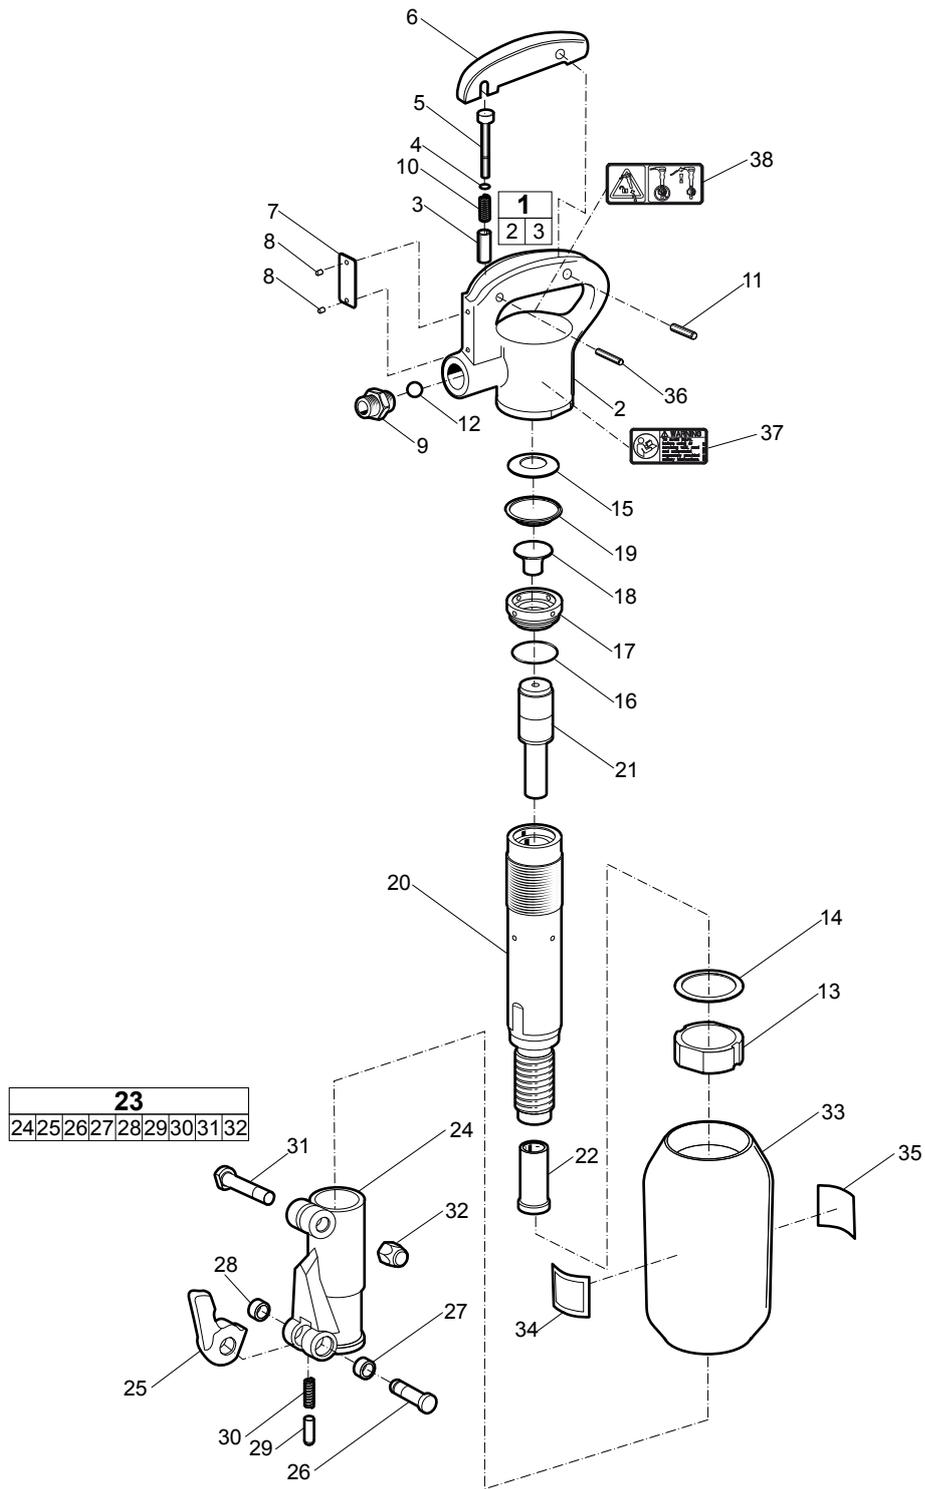


No.	Description	Remark	Quantity	Part number
1(2-3)	Handle, complete		1	3362 2600 13
2	Handle		1	-
3	Bushing		1	3360 3126 61
4	O-ring	5 x 1.5 mm 70 SHORE 0.20 x 0.06 in.	1	0663 9136 00
5	Valve stem		1	3360 1644 85
6	Trigger		1	3360 1644 86
7	Data plate		1	-
8	Screw		2	0244 4144 00
9	Nipple		1	9000 0343 00
10	Spring		1	3310 1379 00
11	Spring pin	8 x 28 mm DIN 1481	1	0108 1357 00
12	Ball		1	3310 1380 00
13	Nut		1	3361 8546 10
14	Lock washer		1	3362 2644 44
15	Disc spring		1	0384 3437 00
16	O-ring	47.3 x 2.62 mm 1.86 x 0.10 in.	1	0663 2101 55
17	Valve housing		1	3360 9913 22
18	Main valve		1	3360 1646 84
19	Cover		1	3362 2600 10
20	Cylinder		1	3362 2600 06
21	Piston		1	3360 9231 04
22	Tool chuck	Hexagonal 22 x 82.5 mm 7/8 x 3 1/4 in.	1	3360 1644 80
23(24-32)	Front head, complete		1	3360 0704 88
24	Front head		1	3360 3126 63
25	Tool retainer		1	3360 9945 24
26	Pin		1	3360 3125 22
27	Bushing	Inner diameter = 15 mm 0.59 in.	1	3360 1644 89
28	Bushing	Inner diameter = 13 mm 0.51 in.	1	3360 1644 90
29	Plunger		1	3360 3125 26
30	Spring		1	3310 1378 00
31	Hex socket screw		1	0211 5161 85
32	Lock nut		1	0292 1408 00
33	Silencer		1	3310 1345 00
34	Label	"Atlas Copco"	1	0690 1356 00
35	Sound power label		1	-
36	Spring pin	5 x 24 mm DIN 1481	1	0108 1298 00
37	Safety label	Read instruction manual	1	3310 1602 00
38	Eject warning label		1	3310 1572 00

Insertion tools



ISO standard hexagon 22 x 82.5 mm ($\frac{7}{8}$ x 3 $\frac{1}{4}$ in.)




Point to flat




No.	Description	W (mm)	L (mm)	L _T (mm)	Wt (kg)	Part number
1	Moil point	-	380	475	1.6	3083 3242 00
		-	1000	1095	3.6	3083 3243 00
2	Narrow chisel	-	380	475	1.6	3083 3244 00
		-	1000	1095	3.6	3083 3245 00

Round 25 x 75 mm (1 x 3 in.)



No.	Description	W (mm)	L (mm)	L _T (mm)	Part number
1	Moil point	-	330	415	3083 3265 00
		-	450	535	3083 3265 10
2	Narrow chisel	-	330	415	3083 3266 00
		-	450	535	3083 3266 10

Round 1 x 3 in. (25 x 75 mm)



No.	Description	W (in.)	L (in.)	L _T (in.)	Part number
1	Moil point	-	13.0	16.3	3083 3265 00
		-	18.0	21.0	3083 3265 10
2	Narrow chisel	-	13.0	16.3	3083 3266 00
		-	18.0	21.0	3083 3266 10

Accessories

Pre-mounted rubber hose with couplings

Description	Remark	Quantity	Part number
Rubber hose, pre-mounted with European type claw coupling, 3 m (10 feet) (1 x claw coupling + 1 x hose nipple with cup nut, G $\frac{3}{4}$ in.)	Ø12.5 mm Ø½ in.	1	9030 2044 00

Water separator

Description	Remark	Quantity	Part number
Water separator VAM 01, European type claw couplings	Airflow < 50 l/s Airflow < 106 ft ³ /min	1	8092 0110 58
Water separator VAM 01, US type claw couplings	Airflow < 50 l/s Airflow < 106 ft ³ /min	1	8092 0110 59
Water separator VAM 5A, European type claw couplings	Airflow < 120 l/s Airflow < 254 ft ³ /min	1	8092 0110 82
Water separator VAM 5A, US type claw couplings	Airflow < 120 l/s Airflow < 254 ft ³ /min	1	8092 0110 83




Lubricator

Description	Remark	Quantity	Part number
Lubricator CLG 30, European type claw couplings	For mineral and synthetic oil	1	8202 5102 39
Lubricator CLG 30, US type claw couplings	For mineral and synthetic oil	1	8202 5102 40

Breaker and hammer AIR-OIL

Description	Remark	Quantity	Part number
Breaker and hammer AIR-OIL	0.25 l 0.06 US gallon	1	8099 0202 40
Breaker and hammer AIR-OIL	1 l 0.26 US gallon	1	8099 0202 36
Breaker and hammer AIR-OIL (pack)	1 l 0.26 US gallon	20	8099 0202 81
Breaker and hammer AIR-OIL	5 l 1.32 US gallon	1	8099 0202 02
Breaker and hammer AIR-OIL (pack)	5 l 1.32 US gallon	4	8099 0202 85

Claw couplings

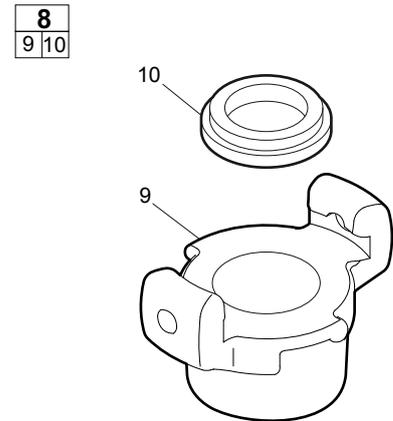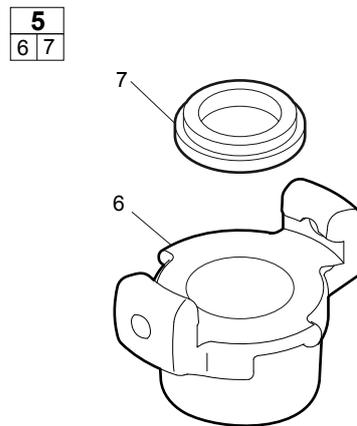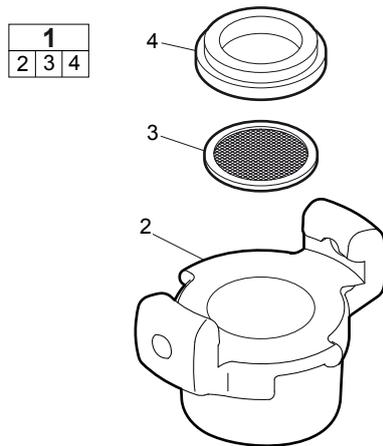

No.	Description	Remark	Quantity	Part number
1(2-4)	Claw coupling with strainer, complete		1	9000 0306 01
2	Claw coupling	Standard G $\frac{3}{4}$ in.	1	-
3	Strainer		1	9000 0000 10
4	Seal		1	9000 0000 00
5(6-7)	Claw coupling, complete		1	9000 0306 00
6	Claw coupling	Standard G $\frac{3}{4}$ in.	1	-
7	Seal		1	9000 0000 00
8(9-10)	Claw coupling, complete		1	9001 0005 06
9	Claw coupling	US-universal $\frac{3}{4}$ in.	1	-
10	Seal		1	9001 0005 15

Any unauthorized use or copying of the contents or any part thereof is prohibited.
This applies in particular to trademarks, model denominations, part numbers, and
drawings.

© 2011 Atlas Copco Construction Tools AB | No. 9800 0846 01b | 2011-04-05

Atlas Copco

www.atlascopco.com